

PREMIUM INSIGHTS – GAIN REAL-TIME INSIGHT INTO YOUR PROCESS

Process Insights' products and solutions deliver innovative and differentiated analysis and measurement solutions and technologies that add high value to our customers and protect the environment.

Our commitment is to deliver smart and affordable innovation that optimizes process, improves safety, and transforms our world.

CENTERS OF EXCELLENCE

PROVIDING PROVEN SOLUTIONS FROM A GLOBAL TECHNOLOGY LEADER

Extrel CMS

575 Epsilon Drive
Pittsburgh, PA 15238
USA
+1 412 963 7530
www.extrel.com
info@extrel.com
support@extrel.com

Process Insights – The Americas

4140 World Houston Parkway
Suite 180
Houston, TX 77032
USA
+1 713 947 9591
info@process-insights.com

Process Insights – EMEA

ATRICOM
Lyoner Strasse 15
60528 Frankfurt
Germany
+49 69 20436910
info@process-insights.com

Process Insights – APAC


Wujiang Economic and Technology
Development Zone
No. 258 Yi He Road, 215200 Suzhou
Jiangsu Province China
+86 400 086 0106
info@process-insights.com

PRODUCT DATASHEET

MAX300-RTG 2.0

Real-time Gas Analyzer with Touch Screen Interface

NEW

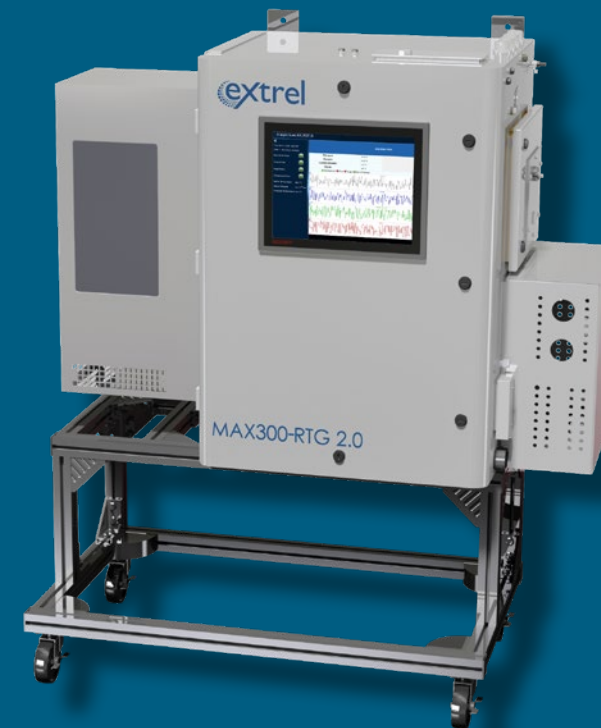

OUR PREMIUM GLOBAL BRANDS

AQ ALPHA OMEGA
INSTRUMENTS

ATOM
INSTRUMENT

extrel

LAR THE TOC COMPANY

MBW calibration

COSAXENTAUR

HYGROCONTROL

GuidedWave

Tigeroptics

www.process-insights.com Copyright © 2022 Process Insights, Inc. All Rights Reserved.

Continuous, real-time analysis

Full, speciated composition

High sensitivity and wide dynamic range

- Fast analysis for advanced process control, environmental compliance, and life safety monitoring
- Complete quantitative stream composition: total application coverage with fewer analyzers required
- Multi-port stream selector for up to 160+ samples
- Low maintenance and easy to operate with simple touch screen interface
- Industry-best customer support and application team

SPECIFICATIONS

System Highlights

| | |
|--|--|
| Detectable compounds: | Any gas or vapor sample |
| Integrated touch screen: | 15" display Customizable and interactive Full Access to Questor5 software |
| Detection range: | Faraday detector: 100% – 5 ppm Electron multiplier: 100% – 5 ppb* Membrane inlet: 100% – 10 ppt* |
| Number of sample streams: | 16, 31,40, 80, 120, 160+ |
| Analysis rate: | 0.1 – 16 seconds per component Customizable |
| Number of components: | Unlimited |
| Number of analysis routines: | Unlimited |
| Number of user configurable data tags: | Unlimited |
| Precision: | <0.05% RSD over 24 hours** |
| Stability: | <0.5% RSD over 30 days** |
| Filaments: | Two, one active and one spare with automatic switchover |
| Analyzer maintenance: | 1-3 years† |
| Roughing pump: | 6-12 months† |
| Manual or fully automated calibration and validation: | 3-12 month calibration intervals |
| Mass range options: | 1 to 250, 300, or 500 amu |
| Mass filter: | 19mm quadrupole for high precision, sensitivity and stability |

* Matrix dependent. Documented on trace air components and benzene.

** Based on the analysis of 1% argon, scan speed 1 second per analysis.

† Application dependent.

MAX300-RTG System Specifications

Power Supply Options:

- 115 VAC (+/- 10%), 50/60 Hz, Two 20 Amp Circuits
- 230 VAC (+/- 10%), 50/60 Hz, One 20 Amp Circuit

Power Consumption:

- Nominal 2740 Watts
- Heat Load: 2991 Watts (10,200 BTU/hour)

Weight:

- Standard Enclosure: 450 lbs (205 kg)*
- Optional cart: 40 lbs (18 kg)

Ambient Requirements:

- Temperature: -4°F to 120°F (-20°C to 49°C)
- With A/C, cold start ≥54°F (12°C)

Area Classification Options:

- General Purpose
- Class 1, Division 2, Groups BCD, T3 or T4
- IEC/ATEX, Zone 2, Group IIC or IIB +H2*, T3 or T4



Additional Utilities:

- Purge gas (for hazardous area installations)
- Calibration gas cylinders: minimum 2*

Data System and Communications:

- External Control Interface: Modbus (TCP/IP, Fiber Optics, Serial) or Analog Input
- Login security levels: Administrator, User, Viewer
- External Communications: Modbus (TCP/IP or Serial), Analog and Digital I/Os, Fiber Optics

*Configuration dependent

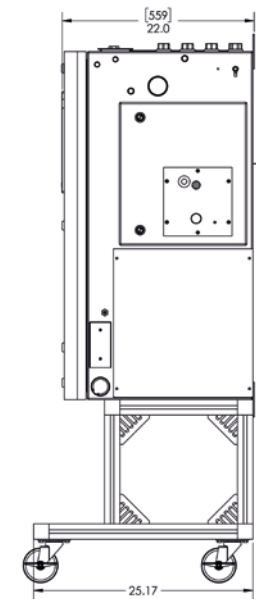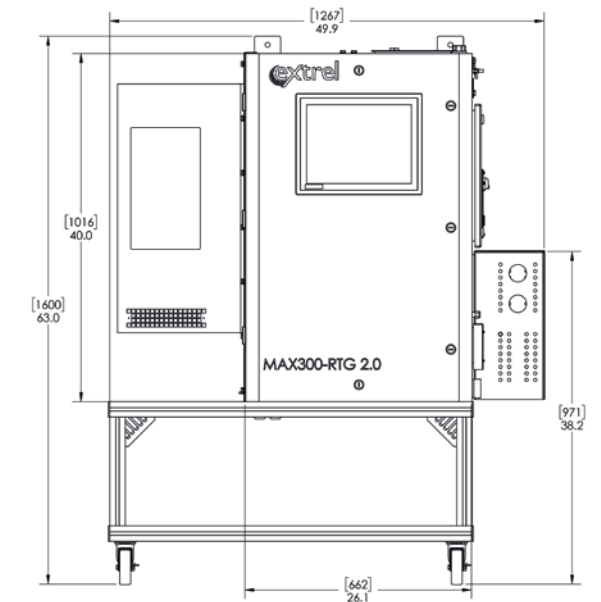

MAX300-RTG 2.0 enclosure with Cart.
Dimensions shown in inches [mm]

Exceptional Worldwide Service and Support

For over 50 years, Extrel has been committed to providing the highest quality support services for the thousands of instruments installed worldwide. Factory trained and certified personnel offer industry-leading support to Extrel customers at every stage of process development and manufacturing.